

www.firmamtm.pl

+48 22 353 11 11

e-mail: biuro@firmamtm.pl



OGRZEWANIE - WENTYLACJA - KLIMATYZACJA




MTM®

Producent urządzeń grzewczych multiolejowych,
na paliwa alternatywne oraz na paliwa stałe.

MTM Dariusz Seferyński, ul. Ks. J. Poniatowskiego 11, 05-230 Kobyłka

MOBILE HEATER FOR SOLID FUELS 55M TYPE

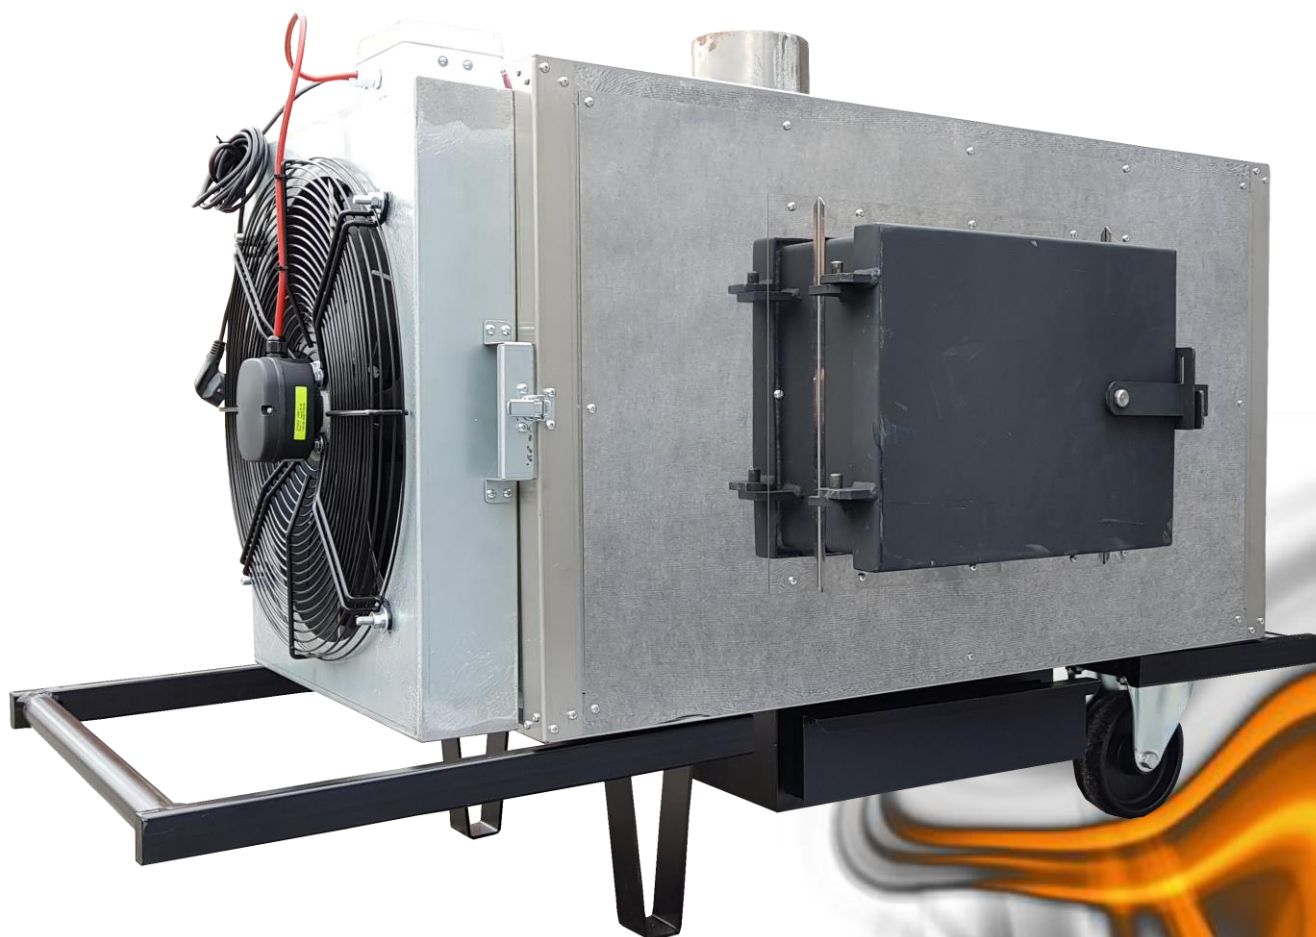

INSTALLATION AND MAINTENANCE MANUAL

MTM Dariusz Seferyński

Tel. 22 353-11-11, 22 353-22-22

v. 07/2022

The operating manual is an integral and essential part of the product and will also have to be handed over to the user during ownership transfer. Please read it carefully and keep it for future reference, as all notes in it provide essential safety instructions for installation, operation, and maintenance.

The heater must be installed under the standards in force in the destination country, according to the manufacturer's instructions, and by qualified personnel. Improper device installation can cause injury to people and animals and damage property for which the manufacturer is not responsible. The air heater may only be used for the purpose it was expressly intended. Any other use is improper and, therefore, dangerous.

In the event of errors during assembly, operation, or maintenance, caused by failure to comply with the applicable legislation, regulations, or instructions contained in this manual (or others provided by the manufacturer), the manufacturer declines any contractual or non-contractual liability for damages and the warranty for the device becomes void.

The selection of heating units for heating facilities is carried out based on the thermal balance of buildings, with particular emphasis on losses resulting from heat transmission to the facilities..

2. PURPOSE OF THE HEATER

NPS air heaters are designed to heat the air in small and medium cubature rooms in buildings without water installation. Heat is produced by combustion, and heat energy is transferred from the flue gas to the fresh air through the walls of the combustion chamber and the heat exchanger.

Air heaters are devices ideally suited for:

- carpentry shops, production halls, warehouses,
- livestock buildings, greenhouses, drying rooms,
- workshops, assembly plants,
- small or large construction sites,

The NPS heater is a mobile device that generates heat from solid fuel combustion (wood, coal, and all kinds of wood waste) directly from the heat exchanger tube to the environment without any intermediate liquids. Burning produces smoke and other gases that are discharged through the chimney.

ATTENTION!

<i>Due to the specification of operation of the air heater, supervision over the device in the form of control of operating parameters is required.</i>
--

3. HEATER DESCRIPTION

The NPS air heater consists of the following parts:

- combustion chamber with heat exchanger (body)
- covers
- ash pan drawer
- cast iron grate
- fan assembly
- electric box with thermostat
- transport wheels

The heat is generated from combustion in the combustion chamber equipped with a cast iron grate. Natural and forced convection transfer thermal energy from the flue gas to the fresh air.

Air and exhaust gas pass through separate welded and adequately sealed channels. After cooling, the exhaust gases resulting from fuel combustion are removed through a duct that must be connected to a chimney or a smoke duct. The diameter of the chimney or flue must be large enough to ensure efficient exhaust removal. The air used in the combustion process is taken directly from the outside, from the heated room or building. For this reason, it is of utmost importance to ensure proper ventilation of the heated space or building, which guarantees a continuous supply of adequate fresh air. The ash formed from combustion falls to the ash drawer, from where it can be easily removed. The heated air is discharged through the exhaust grille, which is mounted on the side of the air heater.

The electric box with a thermostat is responsible for the power supply to the heater fan. When the air heater body reaches the set temperature (35°C), the fan is turned on, and warm air is blown onto the room where the heater is installed.

4. FUEL PARAMETERS

HINT!


ATTENTION!

ATTENTION!

ATTENTION!

5. TECHNICAL DATA OF THE HEATER.

5.2 MODEL OF THE RATING PLATE

MTM 04-239 Warszawa ul. Młodnicka 52 C tel. +48 22 353 11 11		SERIAL NO. / YEAR OF PRODUCTION NUMER FABRYCZNY / ROK PRODUKCJI	
			
TYPE TYP	NPS 55M		
MAX CAPACITY MAKSYMALNA WYDAJNOŚĆ	55 kW		
DIMENSIONS WYMIARY	0,7m x 1,45m x 0,95m		
AIR FLOW PRZEPŁYW POWIETRZA	5500 m ³ / h		
FUEL PALIWO	WOOD DREWNO		
FLUE EXHAUST WYLOT SPALIN	fi 150 mm		
ELECTRICAL SUPPLY ZASILANIE ELEKTRYCZNE	230 V / 50 Hz		
ELECTRICAL POWER MOC ELEKTRYCZNA	276 W		
WEIGHT WAGA	140 kg		

6. TRANSPORT AND INSTALLATION OF THE HEATER.

6.1 TRANSPORT AND STORAGE.

The heaters are delivered assembled on a pallet in foil packaging.
Use appropriate lifting gear to raise and lower the heater. Before transporting the heater, it should be secured against shifting and tilting on the vehicle platform using straps, wedges, or wooden blocks.

HINT !
<i>The heater must be transported in an upright position!</i>

NPS heaters can be stored in unheated, roofed, and ventilated rooms.
Before installation, check the completeness of the delivery and its technical condition.

6.2 INSTALLATION REQUIREMENTS

Before installing the heater, please familiarize yourself with the requirements of this manual and the requirements of national regulations.

Compliance with the recommendations included in the manual during installation and operation of the heater will allow for long and trouble-free use of the heater. It will allow for obtaining the appropriate technical parameters.

It is advisable that the installation design, device selection, and assembly be performed by a professional installation company having appropriate permissions. Installation of the device should be preceded by a consultation with a chimney specialist and a fire protection specialist.

Before starting the installation, it is recommended to have a written expert opinion on the insulation and ventilation of the building, as well as chimney expertise regarding the discharge of flue gases (chimney).

ATTENTION!
<i>A professional installation company should install the heater following the applicable regulations!</i>

ATTENTION!
<i>It is forbidden to install the heater outside the building (outdoors)</i>

FUEL

The fuel should be stored in a separate technical room near the heater or in the room where the heater is located, but not closer than 0.5 m from the heater.

ATTENTION!
<i>It is forbidden to use exhaust ventilation in the boiler room.</i>

VENTILATION

It is forbidden to use exhaust fans in the room where the heater takes the combustion air from the room and with the natural exhaust gas discharge, as well as in the room with inlets to the flue gas pipes.

Using individual exhaust fans in rooms directly adjacent to the room where the heater is installed may also cause negative pressure and uncontrolled outflow of exhaust gases from the heater to the room.

The heater installation room must provide a gravity supply and exhaust system. This installation must not cause negative pressure in the room.

The air supply system should ensure the supply of combustion air in the amount of not less than 10 m³ / h per 1kW of the installed nominal power of the furnaces and not less than 20 m³ / h per person intended for permanent stay in the room.

The supply and exhaust ventilation openings should be secured with a steel mesh and constructed so they cannot be clogged. The location of the grilles should not cause drafts.

ATTENTION!
<i>A sufficient supply of fresh air to the boiler room must be ensured. The lack of an adequate supply of fresh air threatens the so-called Incomplete combustion and formation of carbon monoxide.</i>

6.3. USTAWIENIE NAGRZEWNICY W POMIESZCZENIU.

NPS-type heaters do not require any special foundations, but it is essential to remember about precise leveling. The heater should be placed on an even, stable surface with sufficient load-bearing capacity to be moved. In case of insufficient bearing capacity of the substrate, appropriate measures should be taken to obtain adequate bearing capacity.

The floor in the room where the heater is located should be made of non-flammable materials.

If the floor is made of combustible materials, it should be covered with a steel sheet with a thickness of at least 1 mm, at a distance of at least 1 m from the edge of the heater.

When setting up the heater, fire protection conditions should be taken into account; it is recommended that:

- during installation and operation of the heater, keep a safe distance of min. 1.5 m from flammable materials,
- for flammable materials with the degree of flammability of C3, which burn quickly and easily even after removing the ignition source, this distance doubles, i.e., min. 3m
- if the degree of flammability is unknown, the safety distance must also be doubled.

The degree of flammability of building masses and products	Building masses and products
A - non-flammable	Sandstone, concrete, bricks, fire plaster, mortar, ceramic tiles, granite

B - hardly flammable	Wood-cement boards, fiberglass, mineral insulation
C1 - hardly flammable	Beech tree, oak tree, plywood
C2 - medium flammable	Pine, larch, spruce, cork, sawn wood boards, rubber floor coverings
C3 - easily flammable	Asphalt plywood, celluloid pulp, polyurethane, polystyrene, polyethylene, plastic, PVC

The heater should be positioned to allow for easy cleaning and direct access from all sides. The distance between the front of the heater and the opposite wall should not be less than 2m, and the sides of the boiler from the walls should not be less than 0.5m.

6.4. SELECTING HEATER FOR A ROOM

The heating system in an industrial facility should provide adequate thermal comfort. According to the regulations, the temperature in the workplace should be appropriate to the type of work (methods of work and physical effort necessary to perform it) but not lower than 14°C. However, in workrooms where light manual work is performed and in offices, the temperature must not be lower than 18°C. To properly select the heater, the heat demand should be determined. The first step is to establish the heat balance of the building, i.e.

To determine heat losses through walls, doors, windows, entrance gates, etc., and consider heat gains that may come from machines working inside the building, people, or animals (e.g., in a livestock building). This procedure is complicated, so a formula has been drawn up that allows for the proper selection of heaters.

$$P = [q_v W (t_w - t_z)] 0,001$$

Where:

P – heat demand (kW)

q_v – unit heating power depending on the cubic capacity of the building and the approximate wall insulation (W/m³K)

W – building volume (m³)

t_w – required temperature inside the building (°C)

t_z – design outside temperature, for a given region of Poland, under the standard PN-82/B-02403 (°C)

Attention should be focused on determining the unit heating power in a given facility. It depends on the volume and insulation of the building.

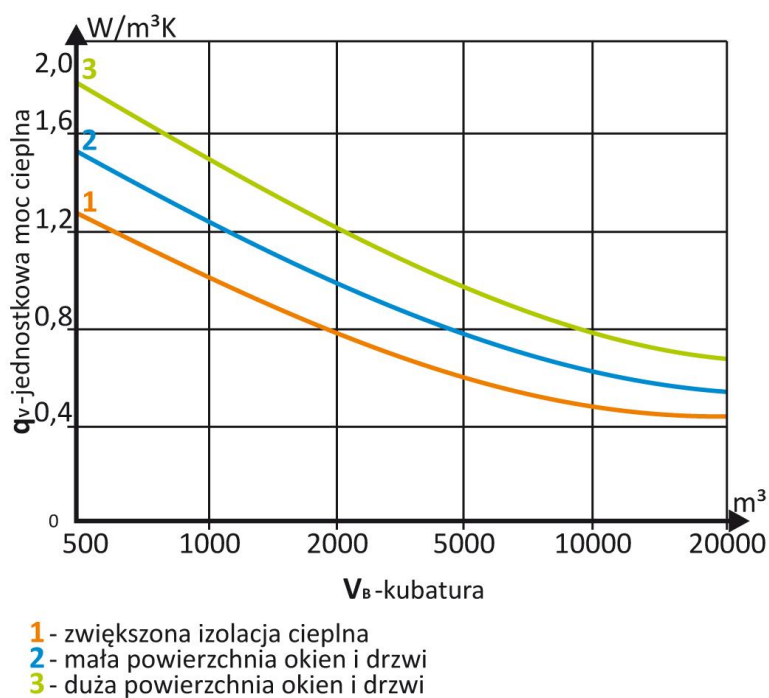


Diagram 1. Unit heating power depends on the volume of the building and the level of insulation of building partitions

Fig. Climate map of Poland



Example: a production hall from the 1970s in Gdańsk, poor insulation (large area of doors and windows), cubature of 1200 m³. The required temperature inside is 16 °C.

We read the value $q_v = 1.5 \text{ W} / \text{m}^3\text{K}$ from the graph

We can read on the map that Gdańsk lies in climatic zone I; therefore, the calculated external temperature is -16 °C.

We calculate:

$$Q = 1,5 \cdot 1200 \cdot [16 - (-16)] \cdot 0,001 = 57,6 \text{ kW}$$

You can choose one 60kW heater or two 30kW heaters. The second solution seems better. It allows for positioning the heaters and directing the air streams for the best efficiency.

The above information is for reference only, and it is recommended to entrust the selection of the device to a professional installation company that will select the appropriate power of the device.

6.5 CONNECTION TO THE ELECTRICAL SYSTEM..

The electrical installation to which the heater is connected should be terminated with a plug-in socket equipped with protective contact.

MAINS VOLTAGES REQUIRED BY THE HEATERS	
NPS 55 M	230V/50Hz

ATTENTION!
<i>Using the socket without the protective terminal connected may result in electric shock!</i>

The socket should be located at a safe distance from sources of heat emission. It is advisable to run a separate circuit of the electric installation to supply the heater.


ATTENTION!
<i>Any connections to the electrical system may be made only by an authorized electrician.</i>

ATTENTION!
<i>The user is forbidden to interfere with or modify the electrical connections.</i>

6.5.1 ELECTRICAL SCHEME

IG - MAIN FUNCTION SWITCH
F1 - FAN FUSE
F2 - HEATING FUSE
TV - FAN THERMOSTAT 35°C
FUN - FUN
L - OPERATION SIGNAL LAMP
D1 / D2 - RECTIFIER DIODE
S – FUN SWITCH

NPS 55M

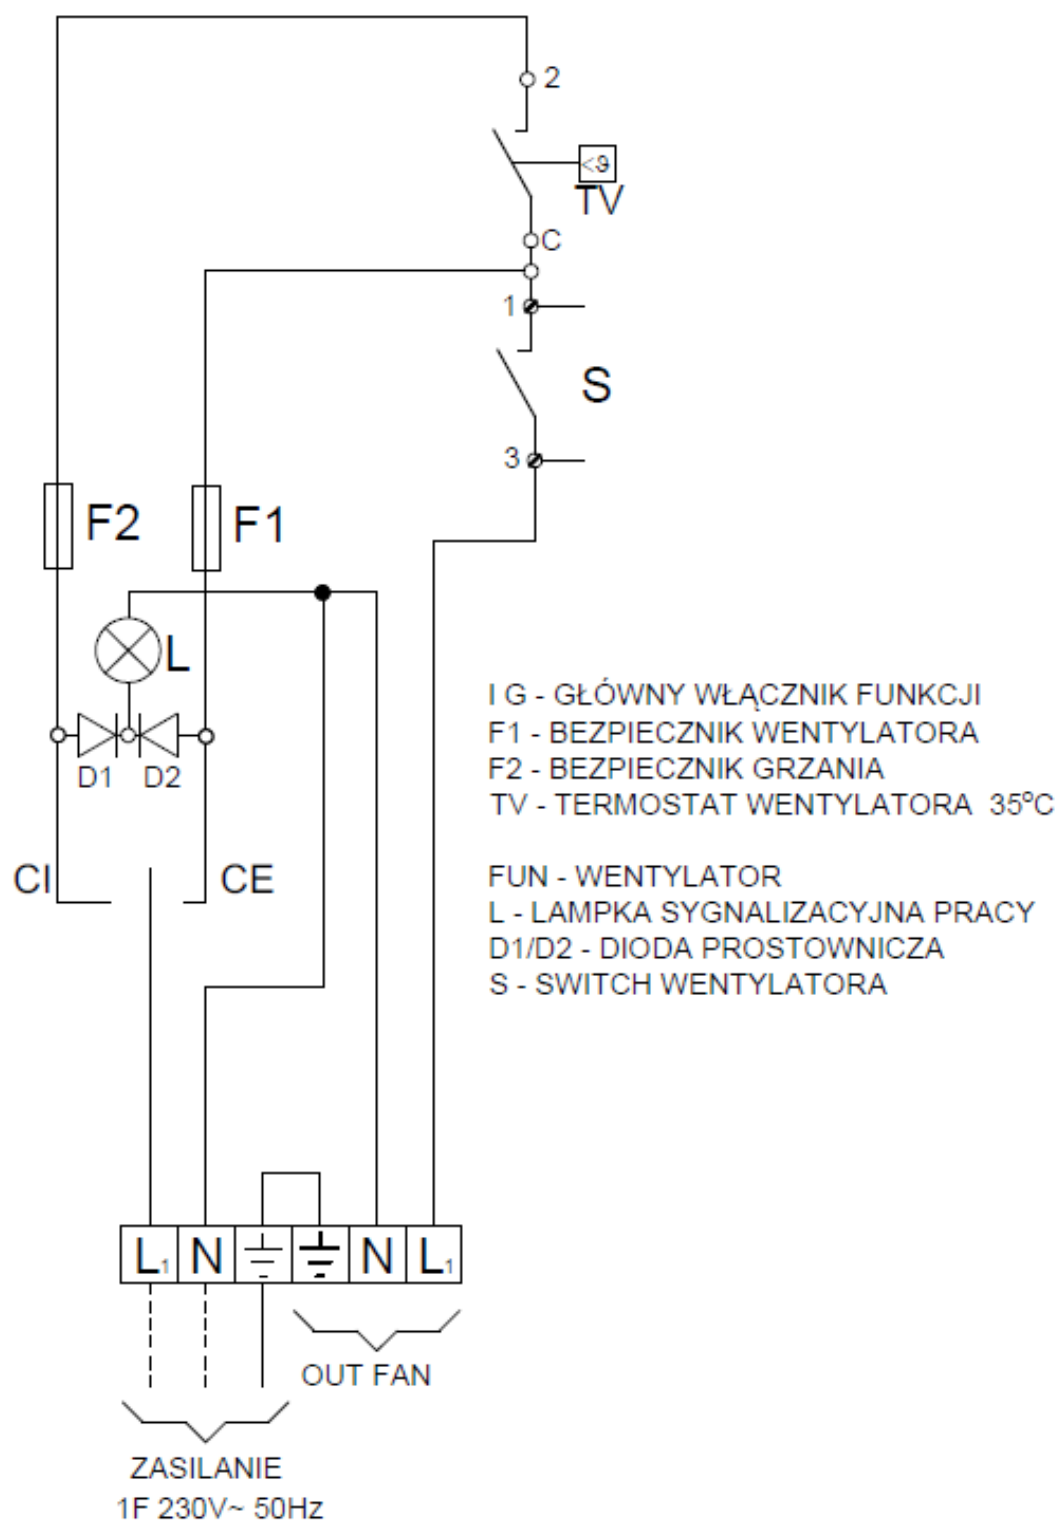

6.6. CONNECTING THE HEATER TO THE CHIMNEY

The method of making the chimney and connecting to it should comply with the Regulation of the Minister of Infrastructure of 12 March 2009 on technical conditions to be met by buildings and their location / Journal of Laws 56/2009 item 461 /. The device cannot be connected to the chimney together with other furnaces.

Suppose the heater is installed in a country other than Poland. In that case, the connection of the heater to the chimney should meet the requirements of the standards and legal regulations currently in force in the land of destination.

The heaters should be connected to the chimney with a profile of an appropriate cross-section and shape, made of steel sheet, and sealed at the outlet of the fumes from the heater and the outlet of the chimney, the length of which should not exceed 1m. The connection should fall towards the heater.


The height and cross-section of the chimney and the accuracy of its execution should ensure that the required chimney draft is maintained. An authorized chimney sweep should confirm the suitability of the chimney for operation.

HEATER	NPS 55 M
Min. Height of the chimney (m)	7
Dimension (cm x cm) Diameter (fi mm)	18x18 200

ATTENTION!!!

Too weak a chimney draft causes water vapor to settle on the exchanger walls, which leads to quick heater damage.

It can also cause smoke from the door and cleaning openings of the heater.

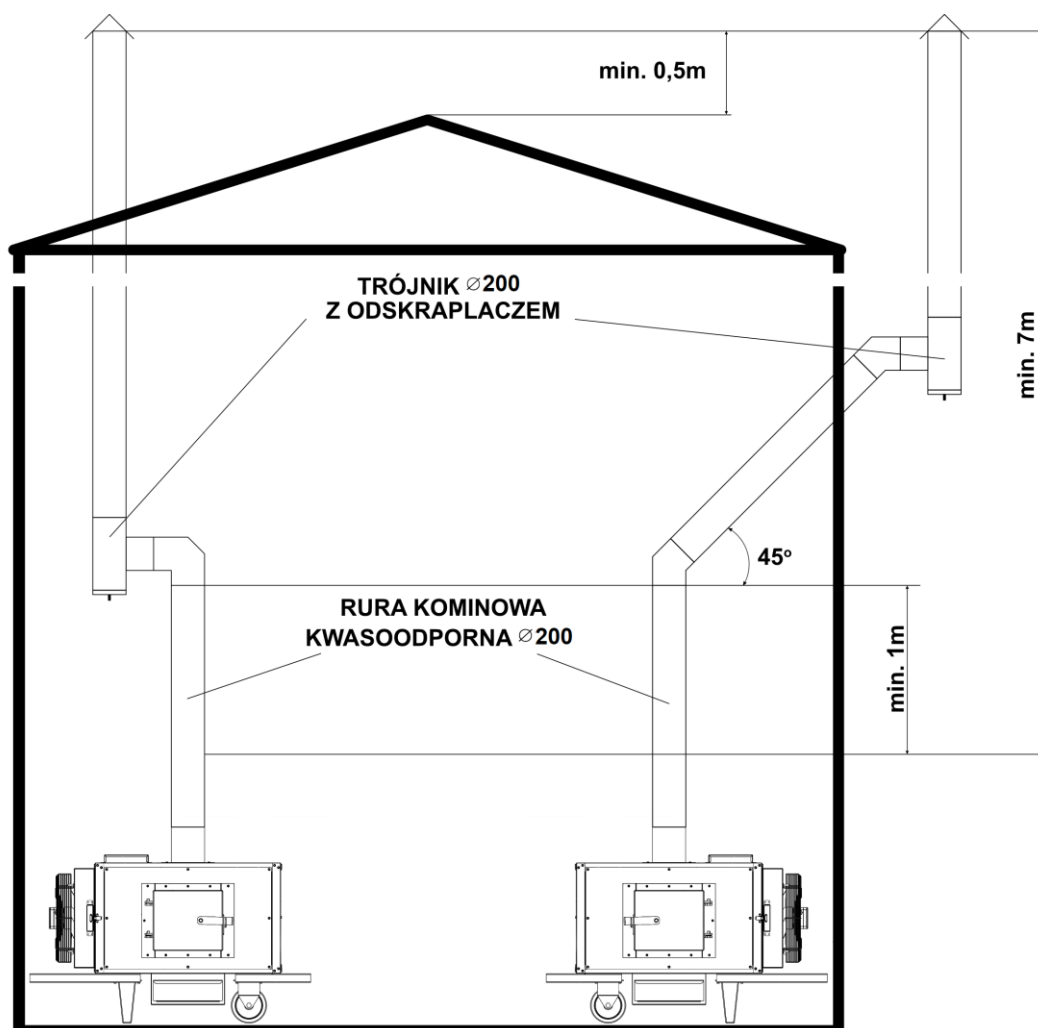

The formula below facilitates the selection of the required chimney cross-section.

$$F = \frac{0,03 \times Q \times 0,86}{\sqrt{h}}$$

where:

F - chimney cross-section (m²)

Q - heater's thermal power (kW)

h - chimney height measured from the grate level to the outlet (m)

The chimney must start at the floor level, as the exhaust fumes from the heater should be able to reflect. It is also essential that there is a chimney hatch with a tight closure at the bottom of the chimney.

The chimney should extend at least 1.5 m above the roof surface. The walls of the chimney channel should be smooth, tight, without narrowings and kinks, and free from other connections. The new chimney should be dried and warmed up before lighting the heater. In case of doubt, the technical condition is assessed by a chimney sweep. Steel pipe chimneys should be 15-20% higher than brick chimneys.

Maintaining the chimney draft within the recommended limits is one of the most important factors ensuring obtaining the heater's appropriate technical and operational parameters..

7. MAINTENANCE AND OPERATION OF THE HEATER

7.1. ZERO START OF THE HEATER.

Before starting up the heater, check:

- tightness of the chimney system,
- correct connection to the chimney,
- tightness of the fan contact surfaces and cleaning holes,
- the method of connection to the electric network.

Carry out the boiler commissioning as follows:

- start the heater,
- fire up the furnace under the guidelines of this Instruction,
- recheck the heater's tightness,
- familiarize the user with the operation,
- write down the data in the warranty card.

HINT!

The completion of the assembly and the heating test must be recorded in the Warranty Card. The completed Warranty Card should be sent as a copy to the manufacturer's address by the user in order to register the user in the company's system.


7.2 START-UP AND OPERATION OF THE HEATER (USER MANUAL)

Before starting the heater lighting, check::

- installation patency,,
- correct operation of the ventilation system

1. In the case of subsequent firing up, remove the ash from the charging chamber. The remaining charcoal in the chamber may constitute the first ignition layer.
2. Place a layer of wood on the remains of charcoal, not filling more than 50% of the furnace.
3. From the top, place a layer of small pieces of wood with the addition of crushed paper. Then lay out a layer of shavings and a few pieces of softwood.
4. The heater should be started by turning the controller switch to the appropriate operating mode.

DESCRIPTION OF WORKING MODES

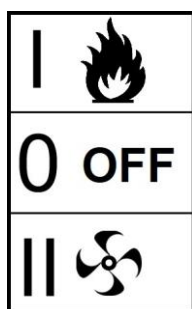

I) AUTOMATIC WORK

0) OFF - MANUAL SWITCH

II) MANUAL FAN SWITCH

I - AUTOMATIC OPERATION - During automatic operation, when the air heater body reaches the set temperature (35 ° C), the fan is turned on, and warm air is blown onto the room in which the heater is installed. The fan is turned off automatically when the heater body cools down to a temperature below 35°C.

0 - MANUAL SWITCH - Used only when the heater stops working, i.e., when the fan cools the heater body down to 35 ° C in automatic mode or when we want to control the fan operation in manual mode. When using the manual shutdown mode, the heater does not respond to the thermostat settings; the fan is turned off.. **ATTENTION! DO NOT SWITCH THE MODE TO THE MANUAL SWITCH OFF WHEN THE FAN DOES NOT STOP OPERATING IN THE AUTOMATIC MODE - THIS COULD DAMAGE THE HEATER.**

II - MANUAL FAN SWITCH - Manual fan activation, regardless of the thermostat settings. To turn off the fan, go to the OFF mode - manual shutdown.

5. Set fire to the paper, and after lighting it, close the loading door, leaving it slightly ajar for a few seconds.

6. To facilitate more air supply during firing up, set the amount of primary air by extending or retracting the ash pan drawer.

7. When the wood fires up well (after approx. 20-30 minutes), the chamber can be refilled with the appropriate amount of wood, approx. 60% of the loading chamber and the loading door closed.

8. The other burning process will consist of gradually refilling fuel and controlling the combustion process by regulating the primary air by sliding or sliding the ash pan drawer in.

9. Do not leave the heater unchecked!

10. In the event of a power failure, you can still use it from the heater. To do this, open the fan assembly to avoid damaging it. The heater then heats in a radiant way. The fan will not start if power is restored until the unit is closed..

ATTENTION!

Heater parts - especially the outer covers - are hot during operation, and appropriate caution is recommended!

ATTENTION!

Never stand in front of the boiler when opening the door. It may burn you!

ATTENTION!

The furnace chamber should permanently be closed, except during the firing up, loading, and removal of furnace waste!

7.3. PERIODIC MAINTENANCE OF THE HEATER - CLEANING AND MAINTENANCE.

HINT!

The convection channels and sheets inside the furnace should be kept clean to obtain the correct combustion efficiency. Soot, dust, and ash from combustion reduce the effectiveness and efficiency of the combustion process.

ATTENTION!
The operating temperature of individual parts of the heater can reach even 600°C!
To clean the heater, turn it off and wait for the time necessary to reduce the heat exchanger temperature.

ATTENTION!
Before starting maintenance work, disconnect the heater's power!

ATTENTION!
All activities should be performed with special care and can only be achieved by adults. Make sure that children are not in the vicinity when cleaning the heater. Use gloves, protective glasses, and headgear to operate the heater.

In the heater's combustion chamber, special attention should be paid to the thorough removal of ash and slag from the grate slots and chamber walls. Such cleaning should be performed each time the heater is fired up. Before cleaning, turn off the heater with the main switch and wait for the exchanger to cool down.

Cleaning of flue gas channels, in which fly ash settles, should be performed through the cleanout holes every 7-14 days, depending on the quality and humidity of the fuel.